LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT **SENSORS** 

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Wafer Detection Liquid Leak Detection Liquid Level Detection Water Detection

Color Mark Detection Hot Melt Glue Detection Ultrasonic Slim Object Detection

Other Products

SQ4

## Leak Detection Sensor Amplifier Built-in

panasonic.net/id/pidsx/global

Related Information

- General terms and conditions...... F-7
- Sensor selection guide ...... P.885~
- General precautions ...... P.1458~
- Korea's S-mark......P.1506







 


# High-speed detection even a little liquid leak

## **EX-F70 SERIES**


## Reliable detection

The unique effect of capillarity enables reliable detection of small leaks and viscous liquids.



### New type of detection method

 When a leak occurs, the beam from the beam-emitting part scatters through the leaked liquid and is not transmitted to the beam-receiving part.



Leakage pan

The beam from the beam-emitting part scatters through the leaked liquid and is not transmitted to the beam-receiving part.


# <When there is no leakage> Beam-emitting part Beam-receiving part Sensing surface

 Leakage pan

The beam from the beam-emitting part reflects off of the surface of the sensor and is transmitted to the beam-receiving part.

#### Compact, space-saving

This slim (10 mm 0.394 in) side-mounting sensor is especially good for use in confined spaces.





EX-F71

## No need for sensitivity adjustment

No need for sensitivity adjustment with adjuster, so initial mounting is easy.

## Easy operation check

This sensor is equipped with a NORMAL indicator (green) which lights up when mounting correctly, and a FAULT indicator (red) which lights up when sensing the leaked liquid or when mounted incorrectly (forgetting to mount exclusive mounting bracket). So, the operation can be checked easily.

#### Safe design

If the sensor is not mounted correctly, if the cable is broken or disconnected, or if the sensor is not operating correctly, the output is the same as when the beam is not received (LEAK). Design deals with human errors such as, forgetting to mount, etc.

## Easy installation & reset

Facilitates easy installation: the SUS mounting bracket type can be installed using only a single screw and the PVC mounting bracket type can be installed using only two screws or an adhesive. No component replacement required for resetting after leak detection. The simple shape makes it easy to wipe off the leaked liquid.

## **PVC** mounting bracket available



A mounting bracket made of PVC (polyvinyl chloride) is available. This mounting bracket can be used normally in environments that would corrode normal metal brackets.

EX-F72

## **EX-F60 SERIES**

EX-FC1

## PFA enclosure gives excellent chemical resistance

The sensor enclosure and the cable sheath are made from PFA which is highly resistant to chemicals. Accurate sensing is achieved even if there are leaks of chemicals such as sulfuric acid, hydrochloric acid or ammonia.



Wire-saving unit made especially for connecting leak detection sensors!

## Easy installation & reset

The simplified shape makes it easy to clean up after liquid leaks, simply by wiping off the liquid, and no parts need to be replaced.

Saves wiring! Now connects up to 8 leak detection sensors

EX-FC1 is a simple wire-saving unit for exclusive use with

**EX-FC1** integrates the outputs from up to 8 leak detection

sensors into a single OR output, so significant wiring and

\* Even with only one leak detection sensor connected, an

OFF signal is output if the sensor detects liquid leakage,


EX-F71/F72, EX-F61/F62 leak detection sensors.

(It can be used with general sensors as well.)

or if the unit has been installed incorrectly.

## Compact, space-saving

Even with its built-in amplifier, the size is compact at W26 x H19 x D9 mm W1.024 x H0.748 × D0.354 in, so that it can be used even in narrow spaces.

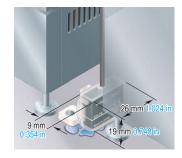

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING LINITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Wafer Detection

Liquid Level Detection Water Detection Color Mark Detection Hot Melt Glue Ultrasonic Small / Slim Object Detection Obstacle Detection Other Products

## Slim & compact Space savings are significant, as the ultra-thin & compact

**EX-FC1** has main unit body dimensions of only W20 × H80  $\times$  D52 mm W0.787  $\times$  H3.150  $\times$  D2.047 in.

#### Connects easily with one-touch connector

Connections are made by simply inserting the leak detection sensor cable leads into the snap male connector SL-CP1, then push until the connector snap-locks! This saves the time and the trouble of stripping the insulation from each lead before attaching to terminals.



## **ORDER GUIDE**

space savings are achieved.

#### Leak detection sensors

Туре		Appearance	Sensing object Cable length		Model No.	Output	
General purpose	SUS mounting bracket type		Water, Fluorinert™ (Note 1, 2)		EX-F71	NPN open-collector transistor	
				2 m 6.562 ft	EX-F71-PN	PNP open-collector transistor	
	PVC mounting bracket type				EX-F72	NPN open-collector transistor	
					EX-F72-PN	PNP open-collector transistor	
Chemical-resistant	PFA mounting				EX-F61	NPN open-collector transistor	
	bracket type		Agent, such as Sulfuric acid, Hydrochloric acid,	3 m 9.843 ft	EX-F61-PN	PNP open-collector transistor	
	PVC mounting		Phosphoric acid or Ammonia etc. (Note 1, 3, 4)	3111 9.043 11	EX-F62	NPN open-collector transistor	
Ö	bracket type				EX-F62-PN	PNP open-collector transistor	

Notes: 1) Highly viscous liquid may not be detected stably.

- Fluorinert™ is the world wide trademark of 3M.
- 3) The agents mentioned above are examples. For details, please contact our office.
- 4) PVC mounting brackets may not be suitable for use depending on the concentration of the detection target. For details, please contact our office

#### 5 m 16.404 ft cable length type

5 m 16.404 ft cable length type (standard: 2 m 6.562 ft or 3 m 9.843 ft) is also

When ordering this type, suffix "-C5" to the model No.

(e.g.) 5 m 16.404 ft cable length type of EX-F71-PN is "EX-F71-PN-C5".

## Simple wire-saving unit for leak detection sensor

e.	Simple wire-saving unit for leak detection sensor					
	Appearance	Model No.	Output			
<b>.</b>		EX-FC1	Relay contact 1 a			

SQ4

800-280-6933 | nsales@ramcoi.com

LASER SENSORS PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

SENSOR

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS FA COMPONENTS MACHINE VISION SYSTEMS

Liquid Leve Detection Water Detection Hot Melt Glue Detection

## **OPTIONS**

Designation	Model No.	Description		
Unit mounting bracket	MS-DIN-3	Mounting bracket for EX-FC1		
Connector end cap	SC-PK	Connector end cap for EX-FC1 8 pcs. per set		

#### **Unit mounting bracket**

• MS-DIN-3



#### **Accessories**

• MS-EX-F7-1 /SUS mounting bracket

• MS-EX-F7-2 /PVC mounting bracket \ for adhesive fixing

• MS-EX-F6-1 /PFA mounting bracket

• MS-EX-F6-2 /PVC mounting bracket

• SL-CP1 (Snap male connector) 10 pcs. per set

• MS-SL-2 /Unit mounting base

· SC-PK

(Connector end caps) 8 pcs. per set



 
• MS-EX-F7-3 PVC mounting bracket for two-point fixing











## **SPECIFICATIONS**

#### **Sensors**

OCITS	Sensors						
		Tuno	General purpose		Chemical-resistant		
		Туре	SUS mounting bracket type	PVC mounting bracket type	PFA mounting bracket type	PVC mounting bracket type	
N ON		NPN output	EX-F71	EX-F72	EX-F61	EX-F62	
Item	Model No.	PNP output	EX-F71-PN	EX-F72-PN	EX-F61-PN	EX-F62-PN	
Sensing object			Water, Fluorine	Water, Fluorinert™ (Note 2, 3)  Agent, such as Sulfuric acid, Hydrochloric acid, Phosphoric acid or Ammonia etc. (Note 2, 4, 6)			
Suppl	ly voltage		12 to 24 V DC ±10 % Ripple P-P 10 % or less				
Curre	nt consum	nption	10 mA or less (PNP out	put type: 15 mA or less)	15 mA	or less	
Outpu	Output		<npn output="" type=""> NPN open-collector transistor <ul> <li>Maximum sink current: 50 mA</li> <li>Applied voltage: 30 V DC or less (between output and 0 V)</li> <li>Residual voltage: 1.0 V or less (at 50 mA sink current)</li> <li>0.4 V or less (at 16 mA sink current)</li> </ul> <pnp output="" type=""> <ul> <li>Maximum source current: 50 mA</li> <li>Applied voltage: 30 V DC or less (between output and +V)</li> <li>Residual voltage: 1.0 V or less (at 50 mA source current)</li> <li>Residual voltage: 1.0 V or less (at 16 mA source current)</li> </ul></pnp></npn>				
	Utilization	category	DC-12 or DC-13				
	Output op	eration	In normal state: ON, When leak detected or the sensor is mounted improperly: OFF				
	Short-circ	uit protection	Incorporated				
Respo	onse time		50 ms or less				
FAUL	.T indicato	r	Red LED (lights up when the leak liquid is detected, or the sensor is mounted improperly)				
NORN	MAL indica	ator	Green LED (lights up when the sensor is mounted properly)				
Pollut	ion degree	9	3 (Industrial environment)				
Protec	ction		IP67 (IEC)				
Ambie	ent tempe	rature	-10 to +60 °C +14 to +140 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F (Note 5)				
Ambie	ent humidi	ty	35 to 85 % RH, Storage: 35 to 85 % RH				
Ambie	ent illumin	ance	Incandescent light: 1,000 tx at the light-receiving face				
Emitti	Emitting element		Infrared LED (non-modulated)				
Mater	Material		Enclosure: Polypropylene Enclosure: PFA				
Cable	Cable		0.1 mm² 3-core PVC cabtyre cable, 2 m 6.562 ft long 0.1 mm² 3-core PFA cabtyre cable, 3 m 9.843 ft long				
Cable extension		1	Extens	Extension up to total 50 m 164.042 ft is possible with 0.3 mm², or more, cable.			
Weigh	Weight		Net weight:	25 g approx.	Net weight:	60 g approx.	
Accessories			MS-EX-F7-1 (SUS mounting bracket) (Note 7): 1 pc.	MS-EX-F7-2, MS-EX-F7-3 (PVC mounting bracket) (Note 7):1 pc. each for two-point-fixing and adhesive-fixing	MS-EX-F6-1 (PFA mounting bracket): 1 pc.	MS-EX-F6-2 (PVC mounting bracket): 1 pc.	

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) Highly viscous liquid may not be detected stably.
- 3) Fluorinert™ is the world wide trademark of 3M.
- 4) The agents mentioned above are examples. For details, please contact our office.
- 5) Liquid being detected should also be kept within the rated ambient temperature range.
- 6) PVC mounting bracket may not be used depending on type or viscosity etc. of the agent. For details, please contact our office 7) The mounting bracket for EX-F71(-PN) is not interchangeable with that of EX-F72(-PN) due to the different sensitivity settings of each sensor.

## **SPECIFICATIONS**

## Simple wire-saving unit

Designation Simple wire-saving unit for leak detection sensor							
Item Model No.			EX-FC1				
Applicable connector		nector	SL-CP1				
Supply voltage			12 to 24 V DC ±10 % Ripple P-P 10 % or less				
Current consumption		nption	50 mA or less (for the unit itself), 135 mA or less (including the sensor input current when all outputs of sensors are ON)				
Output			Relay contact 1a  • Switching capacity: 30 V 1 A DC (resistive load)  • Min. applied load: 10 mV 10 µA DC  • Electrical lifetime: 100,000 switching operations or more (rated load, switching frequency 20 operations/min.)  • Mechanical lifetime: 50 million switching operations or more (switching frequency 180 operations/min.)				
	Utilization	category	DC-12 or DC-13				
	Output op	eration	The output relay is ON when the input signal from the sensor is ON (Note 2)				
Res	ponse time		5 ms or less (excluding the response time of the sensor)				
Inpu	ıt No.		8 Nos.				
ors	Normal		Green LED × 8 (light up when the sensor is connected to each channel and the connection setting switch is set to ON)				
Indicators	Error		Red LED × 8 (light up when the leak liquid is detected by a sensor connected to each channel or a sensor is mounted improperly)				
<u>n</u>	Output		Orange LED [lights up when the output relay is ON (normal)]				
Poll	ution degre	е	3 (Industrial environment)				
Aml	oient tempe	rature	-10 to +60 °C +14 to +140 °F (No dew condensation or icing allowed), Storage: -20 to +70 °C -4 to +158 °F				
Ambient humidity		ity	35 to 85 % RH, Storage: 35 to 85 % RH				
Material			Enclosure: ABS, Unit mounting base: POM, Terminal part: PBT				
Cab	Cable		0.2 mm <sup>2</sup> 4-core cabtyre cable, 2 m 6.562 ft long				
Cab	Cable extension		Extension up to total less than 10 m 32.808 ft is possible, with 0.3 mm², or more, cable.				
Wei	ght		Net weight: 85 g approx.				
Acc	essories		SL-CP1 (Snap male connector): 8 pcs., MS-SL-2 (Unit mounting base): 1 pc.				

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Wafer Detection Liquid Level Detection Water Detection Color Mark Detection Hot Melt Glue Detection Ultrasonic Obstacle Detection Other Products

SQ4

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) Even with only one leak detection sensor connected, an OFF signal is output if the sensor detects liquid leakage, or if the unit has been installed incorrectly.

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO
PHOTOELECTRIC SENSORS

MICRO
PHOTOELECTRIC SENSORS

AREA SENSORS

JUGHT
JUGHT
JUGHT
JUGHT
SENSORS

PRESSURE / FLOW
SENSORS

INDUCTIVE PROXIMITY
SENSORS

SENSORS

SENSORS

SENSORS

SENSORS

JUGHT
JUGH

PLC


HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS


CURING SYSTEMS

# I/O CIRCUIT AND WIRING DIAGRAMS

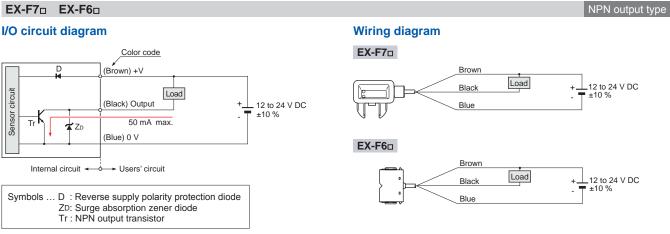


## EX-F7□-PN EX-F6□-PN PNP output type

## I/O circuit diagram

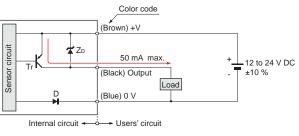

Symbols ... D : Reverse supply polarity protection diode
ZD: Surge absorption zener diode
Tr : PNP output transistor


#### Wiring diagram

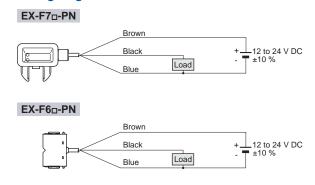

EX-FC1


## Simple wire-saving unit for leak detection sensor

## I/O circuit diagram (for one channel)

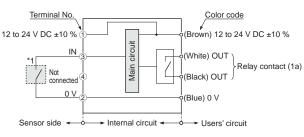

Note: The output does not incorporate a short-circuit protection circuit.

 Do not connect it directly to a power supply or a capacitive load.



Selection
Guide
Wafer
Detection
Liquid Leak
Detection
Liquid Leak
Detection
Liquid Level
Detection
Water
Detection
Color Mark
Detection
Ultrasonic
Small (Sim
Oject Detection
Optstacle
Detection
Other
Products

SQ4 EX-F70/ EX-F60

## PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions.

FIBER SENSORS

LASER SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION

LASER MARKERS

PLC

HIIMAN MACHINE INTERFACES

COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

· Never use this product as a sensing device for personnel protection.



 
· In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

#### EX-F71(-PN) EX-F72(-PN)

#### Mounting

#### EX-F71(-PN)


· Insert the M4 stud-bolt (length 10 mm 0.394 in or more) welded on the user's facilities into the mounting hole of the SUS mounting bracket and screw with an M4 nut (please arrange separately). The tightening torque should be 0.98 N·m or less.



#### EX-F72(-PN)

## <In case of using the two-point-fixing PVC mounting bracket>

 · Insert M4 stud-bolts (length 10 mm 0.394 in or more) welded on the user's facilities into the mounting holes of the two-point-fixing mounting bracket and screw with M4 nuts (please arrange separately). The tightening torque should be 0.49 N·m or less.



### <In case of using the PVC mounting bracket for adhesive fixing>

· Use adhesive to stick fast the mounting bracket on the mounting surface. Please note that if the adhesive sticks out from the bottom surface of the mounting bracket or is 0.5 mm 0.020 in, or more thick, the sensor body cannot be fitted to the mounting bracket.

#### How to fit the sensor body to the exclusive mounting bracket

 Match the notch in the sensor body with the projection of the exclusive mounting bracket and slide till a click is felt.



· When mounting, make sure to use the brackets included with the unit in order to eliminate human error (such as forgetting to install). If the included brackets are not used, stable sensing is rendered impossible.

 
Also, because sensitivity settings differ between the EX-F71(-PN) and the EX-F72(-PN), their brackets cannot be interchanged.

#### EX-F61(-PN) EX-F62(-PN)

#### Mounting

#### EX-F61(-PN)

· Insert the M4 stud-bolt (length 10 mm 0.394 in or more) welded on the user's facilities into the mounting hole of the PFA mounting bracket and screw with an M4 nut (please arrange separately). The tightening torque should be 0.98 N·m or less.




#### EX-F62(-PN)

· Please note that if the excess adhesive from the bottom surface of the exclusive mounting bracket is remained, the sensing capability may be affected. Use adhesive for vinyl chloride (PVC).

## How to fit the sensor body to the exclusive mounting bracket

  Align the projections in the sensor body with the notches of the exclusive mounting bracket and slide till a click is felt.





### How to remove the sensor body from the exclusive mounting bracket

 Pinch the projections of the sensor body and pull the body upwards. Never pull the cable, since it may cause a cable break.





Selection Guide Wafer Detection

Water Detection Color Mark Detection Hot Melt Glue Detection

Liquid Level

Ultrasonic

Obstacle Detection Other Products

SQ4

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

AREA SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS SENSORS

> SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

COMPONENTS

MACHINE
VISION
SYSTEMS

CURING

Selection
Guide
Wafer
Detection
Liquid Leak
Detection
Liquid Level
Detection
Water
Detection
Color Mark
Detection
Hof Meh Glue
Detection
Ultrasonic
Small (Sim
Object Detection
Obstacle
Detection

SQ4 EX-F70/ EX-F60

## PRECAUTIONS FOR PROPER USE

 
Refer to p.1458~ for general precautions.

#### EX-FC1

#### **Mounting**


- When mounting the unit, be sure to use the unit mounting base (MS-SL-2) (accessory).
- When installing the unit mounting base to the unit, insert the base aligned with the grooves of the unit and move until the unit stopper is locked.







 Two installation positions are available for the unit mounting base so that the unit direction can be changed.
 Install the base at one of them.

## Mounting position 1

 


 

 

# <In case of using a DIN rail or the mounting bracket (MS-DIN-3) (optional)>

- ① Fit the rear part of the unit mounting base on a 35 mm 1.378 in width DIN rail or the mounting bracket (MS-DIN-3) (optional).
- ② Press down the front part of the unit mounting base on the 35 mm 1.378 in width DIN rail and fit the front part of the base on the DIN rail.
  - \* For removal, insert a flathead screwdriver into the DIN rail stopper and pull towards yourself.

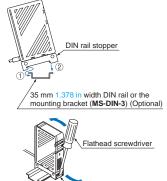


### <In case of using screws>

 Mount using M4 pan head screws with a tightening torque of 0.8 N·m or less. However, in case of side mounting, make sure to mount the unit such that the unit stopper faces front.



DIN rail stopper

## Part description

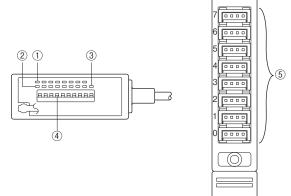

	Designation	Function			
1	Normal indicator (Green LED x 8)	Lights up when sensors are connected to each channel and the connection setting switch is set to ON.			
2	Error indicator (Red LED × 8)	Lights up when leak is detected by any sensor connected or any sensor is mounted improperly. (For details, refer to "Connection setting switch".)			
3	Output indicator (Orange LED)	Lights up when the output relay is ON (Normal).			
4	Connection setting switch	Set the switch to ON when the leak detection sensor is connected, set to OFF when the leak detection sensor is not connected.			
(5)	Connector	Connect the leak detection sensors.			

## Connection

- Make sure to connect or disconnect the snap male connector (**SL-CP1**) in the power supply off condition.
- Take care that wrong wiring will damage the product.
- The terminal No. 4 of the snap male connector (SL-CP1) is not used.

Take care not to connect to the terminal No. 4 by mistake. Further, if there are unused wires, please insulate them.



	Content
1	+V
2	0 V
3	IN
4	No connected

 For details of the hook-up method of the snap male connector (SL-CP1), refer to the Instruction Manual enclosed with SL-CP1.


#### **Connection method**

 By holding the SL-CP1 with the cable connected, insert it into the connector of the EX-FC1 reliably till it stops.

#### Disconnection method

• By holding **SL-CP1**, pull it from the **EX-FC1** horizontally.

Note: Do not pull out by holding the cable, as this can result in cable disconnection.

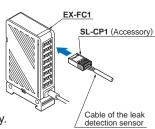

## PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions.

#### EX-FC1


#### **Connection setting switch**

 The connection setting should be carried out in the power supply off condition after removing any electrostatic charge which may be present on your body.

#### Operation matrix for each indicator

Operation	Connection state of the leak detection sensor	State of the connection setting switch	Leak detected condition	Normal indicator (Green)	Error indicator (Red)	Output indicator (Orange)
	Connected	ON	Not leaked	Lights up	Turns off	Lights up
Normal			Leaked	Turns off	Lights up	Turns off
	Unconnected	OFF		Turns off	Turns off	Lights up
Error	Connected	OFF	Not leaked	Lights up	Lights up	Turns off
	Unconnected	ON		Turns off	Lights up	Turns off

- For the channel that the unit sensor is connected to and the connection setting switch is set to "ON" side, the error indicator (red) lights up for a moment when the power is turned on. This is not a malfunction for the unit because it is caused by characteristic of the sensor.
- Make sure to set the connection setting switch with the connector No. to which the leak detection sensor is connected, to "ON" side.
- In case both the normal indicator (green) and the error indicator (red) light up, the connection setting switch with the connector No. to which the leak detection sensor is connected, is not set to "ON" side. Set the connection setting switch with the connector No. to which the leak detection sensor is connected, to "ON" side.
- In case the error indicator (red) lights up, the leak
  detection sensor detects leak or the connection setting
  switch is set to "ON" side without connecting the leak
  detection sensor. If the connection setting switch is set to
  "ON" side without connecting the leak detection sensor,
  set the connection setting switch to "OFF" side.
- If the leak detection sensor detects leak or the connection setting switch is set to "OFF" side in the state that the leak detection sensor is improperly mounted to the mounting bracket, the sensor judges as the output is ON. Be careful when setting.

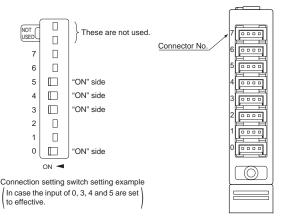

#### All models

#### Wiring

- · Make sure that the power supply is off while wiring.
- Verify that the supply voltage variation is within the rating.
   Take care that if a voltage exceeding the rated range or an AC power supply is directly applied, the sensor may get damaged or burnt.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor,etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case a surge is generated in the used power supply, connect a surge absorber to the supply and absorb the surge.
- Cable extension is possible up to total 50 m 164.05 ft with 0.3 mm², or more, cable (less than 10 m 32.81 ft for EX-FC1). However, in order to reduce noise, make the wiring as short as possible.
- Make sure that stress by forcible bend or pulling is not applied directly to the sensor cable joint.
- EX-FC1 output dose not incorporate a short-circuit protection circuit.

Do not connect it directly to a power supply or a capacitive load.

## Others

- Avoid using the product in an explosive atmosphere because this product does not have an explosive-proof protective construction.
- When liquid remains on the sensing surface after leak detection, wipe all liquid from the sensing surface. To avoid scratching the sensing surface and the enclosed mounting bracket, use a soft cloth.
- In case air bubbles are drawn into the sensing part, take care that it may take some time for sensing to stabilize, or sensing may even become unstable.
   Check the usage conditions thoroughly before use.
- Do not use during the initial transient time (leak detection sensor: 50 ms approx., EX-FC1: 0.5 sec. approx.) after the power supply is switched on.
- Since this sensor employs non-modulated infrared LED, take sufficient care against extraneous light. Do not expose the sensing part directly to the extraneous light.
- Avoid dust, dirt, and steam. Further, do not use this product in an environment containing organic solvents.
- Take care that EX-7□(-PN) and EX-FC1 does not come in contact with oil, grease or organic solvents, such as, thinner, etc.
- In case this sensor is used where electrostatic charge is present, use a metal leak pan, which should be connected to an actual ground.
- These sensors are only for indoor use.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Wafer Detection Uguid Level Detection Water Detection Hot Melt Glue Detection Ultrasonic Snall/Sim

504

Obstacle Detection

Other Products

EX-F70/ EX-F60

LASER SENSORS PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS LIGH SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

> MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION

DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS MACHINE VISION SYSTEMS

CURING SYSTEMS


## DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

## EX-F71(-PN) EX-F72(-PN)

Sensor

## Assembly dimensions with mounting bracket for EX-F71(-PN)

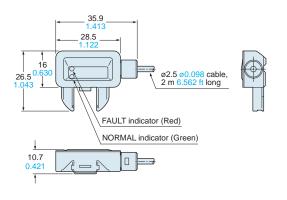


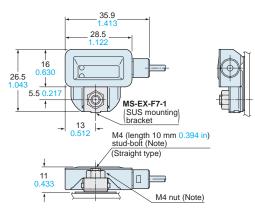

Note: A M4 stud-bolt has been welded to this unit. M4 nut is not supplied with the sensor. Purchase it separately


## Assembly dimensions with mounting bracket for EX-F72(-PN)


## MS-EX-F7-3 / For two-point-fixing

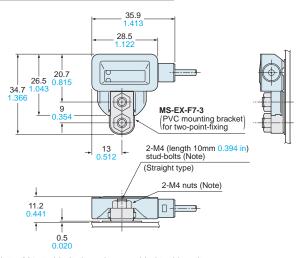

Note: M4 stud-bolts have been welded to this unit. M4 nuts are not supplied with the sensor. Purchase it separately.

## MS-EX-F7-2 / For adhesive fixing

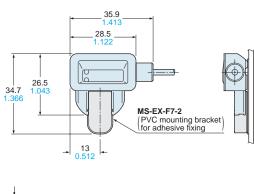

 

Wafer Detection Liquid Lea Detectio Liquid Leve Detection Water Color Mark Detection Hot Melt Glue Detection Small / Slim Object Detection Obstacle Detection

SQ4

Other Products

## DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

FIBER SENSORS

LASER SENSORS

Sensor

PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Wafer Detection

Liquid Level

Water Detection

Color Mark Detection

Hot Melt Glue Detection


Ultrasonic


Obstacle Detection

Other Products


## EX-F61(-PN) EX-F62(-PN)

Assembly dimensions with mounting bracket for EX-F61(-PN)

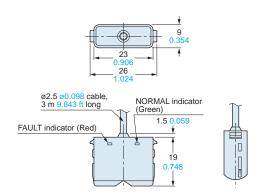

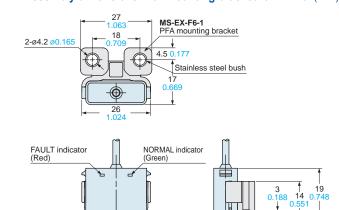

## Assembly dimensions with mounting bracket for EX-F62(-PN)

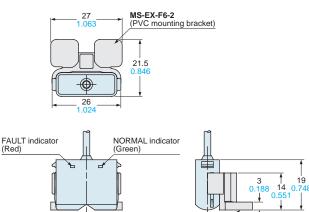



Adhering surface

## MS-DIN-3

Unit mounting bracket (Optional)

4.4 0.173

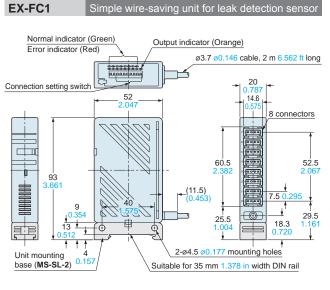

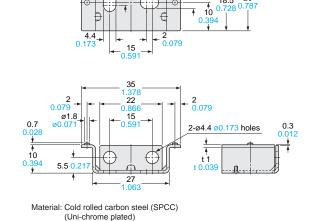

SQ4