## Panasonic<sup>®</sup>

#### INSTRUCTION MANUAL

# Digital Display Pressure Sensor DP-00□(Z)

CMJE-DP0 No.0050-38V

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

#### ♠ WARNING

- Never use this product as a detection device for personnel protection.
- In case of using devices as detectors for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.
- This product is used for noncorrosive gas. The product shall not be used for liquid or corrosive gas.
   Never use fluids having inflammability, toxicity, etc., that affect the human body, either.
- A product intended for use in Japan conforms to the Japanese Measurement Act. Do not use a product intended for use overseas in Japan.

#### 1 APPLICABLE STANDARDS / REGULATIONS

This product complies with the following standards / regulations.

<European Directive>
EMC Directive



## 2 PART DESCRIPTION






 When using this product, connect a joint available in the market to the pressure port. At the time, the tightening torque should be 1.0N·m or less.

0

## **4** MOUNTING

 Use sensor mounting bracket MS-DP1-1 prepared independently.

When mounting this product with sensor mounting bracket, etc., the tightening torque should be 0.5N·m or less.



- Panel fittings MS-DP1-8 (optional) and front cover MS-DP1-3 (optional) are available.
- For the method for mounting panel fittings, refer to the instruction manual that came with the MS-DP1-8.

#### 5 WIRING

#### How to connect

Insert the cable with connector CN-14A-C□ into this product's connection connector section as shown in the right figure.

#### How to disconnect

 Pressing the release lever of the cable with connector, pull out the connector.



Cable with connector

<Recommended product: Contact:

SPHD-001T-P0.5 Housing: PAP-04V-S [Manufactured by JST Mfg. Co., Ltd.]

Note: Do not pull by holding the cable without pressing the release lever, as this can cause cable break or connector break.

#### <Connector pin arrangement>




Connector pin No.	Terminal name
1	+V
2	Comparative output
3	No connection (Note)
4	0V


Note: Open or, Connect to 0V

## 6 I/O CIRCUIT DIAGRAMS

#### NPN output type



#### PNP output type



Note: Open or, Connect to 0V.


## 7 OUTPUT MODE AND OUTPUT OPERATION

 The EASY mode, hysteresis mode or window comparator mode can be selected as the output mode.

For details, refer to < Detailed setting mode> in 
"8 Menu setting mode."

#### EASY mode


The comparative output ON / OFF state can be controlled in this mode.



H: Hysteresis fixed (4 digits) (10 digits or more when the product is for overseas use and used in units of psi.)

#### Hysteresis mode

 The comparative output ON / OFF state can be controlled with randomly set hysteresis in this mode.



H: 2 digits or more

(5 digits or more when the product is for overseas use and used in units of psi.)

#### Window comparator mode

 In this mode, the ON or OFF state of the comparative output is controlled with a pressure in the set range.



H: Hysteresis fixed (4 digits)

(10 digits or more when the product is for overseas use and used in units of psi.)


### **8 MENU SETTING MODE**

#### Display during output operation




": Settings of output operation and display colors can be changed in "Display color setting mode" of "Setting mode."

#### Threshold value setting mode

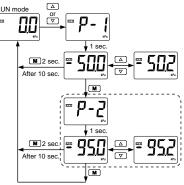

\*: Displayed only when hysteresis mode / window comparator mode is set

#### Zero point adjustment mode



#### Key lock setting / release mode

### <Setting of key lock>




#### <Release of key lock>



\*: The key lock mark appears for 1 sec. when key operation is performed in RUN state with the key lock set (turns OFF in RUN state).

#### Detailed setting mode

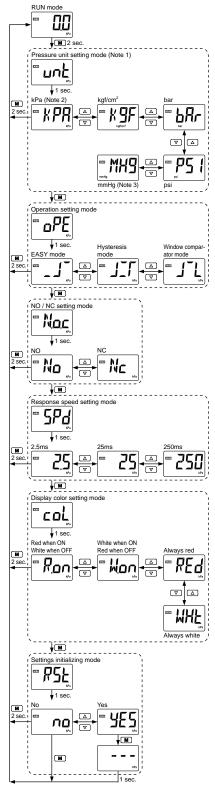

Notes: 1) The pressure unit setting mode is not displayed in the product intended for use in Japan.

2) "MPa" is used for high pressure type.

3) "mmHg" is used only for low pressure type.

4) When setting change has been made, do not turn OFF the power supply within 5 sec. after returning to RUN mode.

#### 9 FACTORY SETTINGS

Туре	Low pressure type High pressure type		
Operation setting	EASY mode		
NO / NC setting	NC	NO	
Threshold value	-50.0	0.500	
Pressure unit	kPa	MPa	
Display color	Red when ON, White when OFF		
Response speed	2.5ms		

#### 10 ERROR INDICATION

Error indication	Description	Remedy	
) <del>-</del> [	The load is short-circuited causing an overcurrent to flow.	Turn OFF the power and check the load.	
ř¦ á	Pressure is applied during zero point adjustment.	Applied pressure at the pressure port should be brought to atmospheric pressure and zero-point adjustment should be done again.	
-jo¦ó	The applied pressure exceeds the upper limit of the displayed pressure range.	Applied pressure range should be brought within the rated pressure range.	
÷jo¦ó	The applied pressure exceeds the lower limit (back pressure) of the displayed pressure range.		

When other error massage is displayed, contact us

#### 11 SPECIFICATIONS

• Model No.

DP-0012-3-4

- 1: Low pressure type, 2: High pressure type None: For outside of Japan, Z: For inside of Japan None: NPN output type, P: PNP output type
- None: With attachment, J: Without attachment

Т	уре	Low pressure type	High pressure type	
Р	ressure type	Gauge p	Gauge pressure	
Rated pressure range		-100.0 to +100.0kPa	0.000 to +1.000MPa	
Displayable / settable pressure range		-101.0 to +101.0kPa	-0.010 to +1.010MPa	
Pressure resistance		500kPa	1.5MPa	
Applicable fluid		Air, Non-corrosive gas		
Supply voltage		12 to 24V DC ±10% Ripple P-P 10% or less		
Current consumption		30mA or less		
Comparative output		NPN output type>     NPN open-collector transistor     Maximum sink current:     50mA     Applied voltage:     30V DC or less     (between comparative output and 0V)     Residual voltage:     2V or less     (at 50mA sink current)	«PNP output type» PNP open-collector transisto • Maximum source current • 50mA • Applied voltage: 30 V DC or less (between compara tive output and + V) • Residual voltage: 2 V or less (at 50mA source current	
	Output operation	Selectable either NO or NC, with key operation		
Hysteresis		Refer to "7 OUTPUT MODE AND OUTPUT OPERATION"		
	Repeatability	±0.2% F.S. (within ±4 digits)	±0.4% F.S. (within ±4 digits)	
	Response time	2.5ms / 25ms / 250ms S	Selected by key operation	
Р	rotection	IP40 (IEC)		
Ambient temperature		0 to +50°C (No dew condensation) Storage: -10 to +60°C		
Α	mbient humidity	35 to 85% RH, Storage: 35 to 85% RH		
P	ollution degree	2		
С	vervoltage category	I		
ι	sable altitude	2,000m or less		
Temperature characteristics (+20°C standard)		+10 to +40°C: Within ±1% F.S. 0 to +50°C: Within ±2.5% F.S.	+10 to +40°C: Within ±2% F.S 0 to +50°C: Within ±5% F.S	
Material		Enclosure: PBT, LCD display: Acryl Pressure port: Brass-nickel plating Mounting screw section: Brass, O-ring: Nitrile rubber (NBR) Key section: Polycarbonate		
Weight (Main body only)		Approx. 25g		
Accessory		CN-14A-C2 (Cable with a connector, 2m long) (optional for J type): 1 pc.		

#### 12 CAUTIONS

- This product has been developed / produced for industrial use only.
- The product shall be used only within the rated pressure range.
- Do not apply pressure exceeding the pressure resistance. Otherwise, destruction of diaphragm occurs, preventing the product to perform normal operation.
- Make sure that the power supply is OFF while performing the wiring operation.

  Verify that the supply voltage variation is within
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) ter-minal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.)
- terminal of the equipment to an actual ground.
  Do not use during the initial transient time (0.5 sec.) after the power supply is switched ON.
- When extending the cable, use a cable whose conductor cross-sectional area is 0.3mm<sup>2</sup> or more. The cable can be extended to up to 10m in
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- The specification may not be satisfied in a strong magnetic field.
- This product is suitable for indoor use only.
- Take care that an excessive stress is not applied
- to the unit. Otherwise, pressure values may vary. Take care that strong impact such as fall is not given to this product. Otherwise, it may be destroyed.
- · Avoid dust, dirt, and steam.
- When cleaning, wipe off with a soft cloth that does not make dirt.
- Take care that the product does not come into contact with organic solvents such as thinner.
- Take care that the product does not come into
- contact with oil or grease.

  Take care that the product does not come into contact with strong acid or alkaline.
- Do not insert wire into the pressure port. Otherwise, destruction of diaphragm occurs, preventing the product to perform normal operation
- Make sure that stress by forcible bend or pulling is not applied to the sensor cable joint.
- Never disassemble or modify the product.

Panasonic Industrial Devices SUNX Co., Ltd.

http://panasonic.net/id/pidsx/global Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Phone: +81-568-33-7861 FAX: +81-568-33-8591