Panasonic INSTRUCTION MANUAL

Amplifier Built-in Leak Detection Sensor **EX-F60** Series

MJEC-EXF60 No.0045-90V

Thank you very much for purchasing Panasonic products. Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.



- This product is a sensor for detecting leak of fluids.
- When this product is used with safety devices, construct the system such that the device itself always operates in the safety side.

1 SPECIFICATIONS

Туре	PFA mounting bracket type (For screw-fixing)		PVC mounting bracket type (For adhesive-fixing)		
	3m cable length type	5m cable length type	3m cable length type	5m cable length type	
Model NPN output type	EX-F61	EX-F61-C5	EX-F62	EX-F62-C5	
Item \ No. PNP output type		EX-F61-PN-C5	EX-F62-PN	EX-F62-PN-C5	
Sensing object	Agent, such as Sulfuric acid, Hydrochloric acid, Phosphoric acid or Ammonia etc. (Note1, 2)				
Supply voltage	12 to 24V DC ± 10% Ripple P-P 10% or less				
Current consumption	15mA or less				
Output	<npn output="" type=""></npn>		<pnp output="" type=""></pnp>		
	NPN open-collector transister PNP open-collector transister				
	Maximum sink current: 50mA Maximum source current: 50mA				
	 Applied voltage: 30V DC or less (between output and 0V) Applied voltage: 30V DC or less (between output and +V) 				
	Residual voltage: 1.0V or less (at 50mA sink current) Residual voltage: 1.0V or less (at 50mA source current)				
	0.4V or less (at 16mA sink current) 0.4V or less (at 16mA source current)				
Output operation	ON when normal operation, OFF when leak is detected or the sensor is mounted improperly.				
Short-circuit protection	Incorporated				
Response time	50ms or less				
Abnormality indicator	Red LED (lights up when leak is detected or the sensor is mounted improperly.)				
Normal indicator	Green LED (lights up when the sensor is mounted properly.)				
Protection	IP67(IEC)				
Ambient temperature	-10 to +60°C (No dew condensation or icing allowed) (Note 3, 4), Storage: -20 to +70°C				
Ambient humidity	35 to 85% RH, Storage: 5 to 85% RH				
Ambient illuminance	Incandescent light: 1,000 lx or less at the light-receiving face				
Emitting element	Infrared LED (non-modulated)				
Material	Enclosure: PFA				
Cable	0.1mm ² 3-core PFA	0.1mm ² 3-core PFA	0.1mm ² 3-core PFA	0.1mm ² 3-core PFA	
	cabtyre cable, 3m long	cabtyre cable, 5m long	cabtyre cable, 3m long	cabtyre cable, 5m long	
Weight	60g approx.	80g approx.	60g approx.	80g approx.	
Accessories	PFA mounting bracket: 1 pc. PVC mounting bracket: 1pc.			g bracket: 1pc.	

Notes: 1) Highly viscous liquid may not be stably detected.

- 2) The agents mentioned above are examples. Further, PVC mounting bracket may not be used depending on type or viscosity etc. of the agent. For details, please contact us.
- 3) Liquid being detected should be also kept within the rated ambient temperature range.
- 4) The specified ambient temperature is only for fixed product.

2 CAUTIONS


- This product has been developed / produced for industrial use only.
- Avoid using the product in an explosive atmosphere because this product does not have an explosive-proof protective construction.
- Make sure to carry out the wiring in the power supply off condition.
- Take care that wrong wiring will damage the sensor.
- Verify that the supply voltage variation is within the rating.
 Take care that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the sensor may get burnt or damaged.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- Do not use during the initial transient time (50m sec. approx.) after the power supply is switched on.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Cable extension is possible up to total 50m with 0.3mm², or more, cable.
 However, in order to reduce noise, make the wiring as short as possible.
- Do not run the wires together with high-voltage lines or power lines or put them in the same race way. This can cause malfunction due to induction.
- In case a surge is generated in the used power supply, connect a surge absoeber to the supply.

- Be sure to use the exclusive mounting bracket when installing the sensor to avoid human error, etc. Reliable detection cannot be guaranteed when this mounting bracket is not used.
- Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case air bubbles are drawn into the sensing part, take care that it may take some time for sensing to stabilize, or sensing may even become unstable.
- When liquid remains on the sensing surface after leak detection, wipe all liquid from the sensing surface. To avoid scratching the sensing surface and the enclosed mounting bracket, use a soft cloth.
- If there is liquid remained or scratch on the sensing surface or the exclsive mounting bracket, normal operation cannot be performed.
- Since this sensor employs non-modulated infrared LED, take sufficient care against extraneous light. Do not expose the sensing part directly to the extraneous light.
- Avoid dust, dirt, and steam. Further, do not use this product where oil or grease splashes to the product, or in an environment containing corrosive gas, etc.
- In case this sensor is used where electrostatic charge is present, use a metal leak pan, which should be connected to an actual ground.
- In case of using this product 50°C or more, be sure to fix this product with a dedicated mounting bracket.

3 MOUNTING

EX-F61□

• Insert the M4 stud-bolt (length 10mm or more) welded on the user's facilities into the mounting hole of the PFA mounting bracket and screw with an M4 nut (please arrange separately). The tightening torque should be 0.98N⋅m or less.

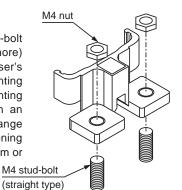



EX-F62□

- Please note that if the excess adhesive from the bottom surface of the exclusive mounting bracket is remained, the sensing capability may be affected.
- Use adhesive for polyvinyl chloride(PVC).

How to fit the sensor body to the exclusive mounting bracket

 Align the projections in the sensor body with the notches of the exclusive mounting bracket and slide till a click is felt.

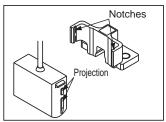





How to remove the sensor body from the exclusive mounting bracket

 Pinch the projections of the sensor body and pull the body upwards.


Never pull the cable, since it may cause a cable break.






4 I/O CIRCUIT DIAGRAMS


NPN output type

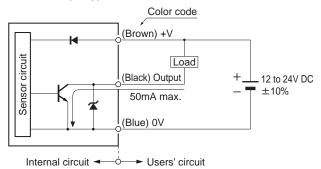

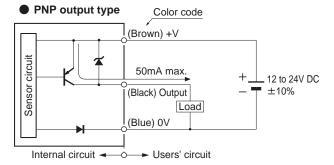


5 DIMENSIONS (Unit: mm)

■ EX-F61□ (Sensor with PFA mounting bracket)

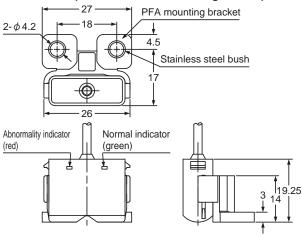

■ EX-F62□ (Sensor with PVC mounting bracket)

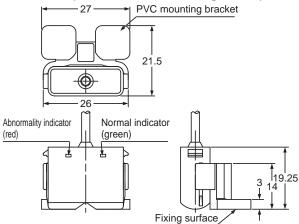

6 INTENDED PRODUCTS FOR CE MARKING

The models listed under ' SPECIFICATIONS' come with CE Marking.

As for all other models, please contact our office.

Contact for CE
 Panasonic Marketing Europe GmbH Panasonic Testing Center
 Winsbergring 15, 22525 Hamburg, Germany

Panasonic Industrial Devices SUNX Co., Ltd.

http://panasonic.net/id/pidsx/global

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Phone: +81-568-33-7861 FAX: +81-568-33-8591

About our sale network, please visit our website.

© Panasonic Industrial Devices SUNX Co., Ltd. 2014 PRINTED IN JAPAN

Panasonic INSTRUCTION MANUAL

Amplifier Built-in Leak Detection Sensor **EX-F70** Series

MJEC-EXF71 No.0044-45V

Thank you very much for purchasing Panasonic products. Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for guick reference.

MARNING

- Never use this product as a sensing device for personnel protection.
- In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

1 SPECIFICATIONS

Туре	SUS mounting bracket type		PVC mounting bracket type		
	2m cable length type	5m cable length type	2m cable length type	5m cable length type	
Model NPN output	EX-F71	EX-F71-C5	EX-F72	EX-F72-C5	
Item \No. PNP output	EX-F71-PN	EX-F71-PN-C5	EX-F72-PN	EX-F72-PN-C5	
Sensing object	Water, Fluorinert TM (Note 1) (Note 2)				
Supply voltage	12 to 24V DC ± 10% Ripple P-P 10% or less				
Current consumption	10mA or less (PNP output type: 15mA or less)				
Output	<npn output="" type=""></npn>		<pnp output="" type=""></pnp>		
	NPN open-collector trans		PNP open-collector transistor		
	 Maximum sink current: 		Maximum source current: 50mA		
	 Applied voltage: 30V DC or less (between output and 0V) Applied voltage: 30V DC or less (between output and +V) 				
	• Residual voltage: 1.0V or less (at 50mA sink current) • Residual voltage: 1.0V or less (at 50mA source current)				
	0.4V or less (at 16mA sink current) 0.4V or less (at 16mA source current)				
Output operation	ON when normal operation, OFF when leak is detected or the sensor is mounted improperly.				
Short-circuit protection	Incorporated				
Response time	50ms or less				
Abnormal indicator	Red LED (lights up when leak is detected or the sensor is mounted improperly.)				
Normal indicator	Green LED (lights up when the sensor is mounted properly.)				
Protection	IP67 (IEC)				
Ambient temperature	−10 to +60°C (No dew condensation or icing allowed) (Note 3), Storage: −20 to +70°C				
Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH				
Ambient illuminance	Incandescent light: 1,000\earts or less at the light-receiving face				
Emitting element	Infrared LED (non-modulated)				
Material	Enclosure: Polypropylene				
Cable	0.1mm ² 3-core PVC	0.1mm ² 3-core PVC	0.1mm ² 3-core PVC	0.1mm ² 3-core PVC	
	cabtyre cable, 2m long	cabtyre cable, 5m long	cabtyre cable, 2m long	cabtyre cable, 5m long	
Weight	Approx. 25g	Approx. 55g	Approx. 25g	Approx. 55g	
Accessories	SUS mounting	bracket: 1 pc.	PVC mounting bracket: 1 pc. each for two-point-fixing and adhesive-fixing		

Notes: 1) Highly viscous liquid may not be stably detected.

- 2) Fluorinert TM is the worldwide trademark of 3M.
- 3) Liquid being detected should be also kept within the rated ambient temperature range.

2 CAUTIONS

- This product has been developed / produced for industrial use only.
- Avoid using the product in an explosive atmosphere because this product does not have an explosive-proof protective construction.
- Make sure that the power supply is off while wiring.
- Take care that wrong wiring will damage the sensor.
- Verify that the supply voltage variation is within the rating.
 - Take care that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the sensor may get burnt or damaged.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.

- Do not use during the initial transient time (approx.
 50m sec.) after the power supply is switched on.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Cable extension is possible up to total 50m with 0.3mm², or more, cable. However, in order to reduce noise, make the wiring as short as possible.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway.
 This can cause malfunction due to induction.
- In case a surge is generated in the used power supply, connect a surge absorber to the supply and absorb the surge.
- Be sure to use the exclusive mounting bracket when installing the sensor to avoid human error, etc. Reliable detection cannot be guaranteed when this mounting bracket is not used.


- Take care not to use the SUS mounting bracket for EX-F72 or the PVC mounting bracket for EX-F71 mistakenly, since normal detection cannot be performed.
- Make sure to use an isolation transformer for the DC power supply. If an auto-transformer (single winding transformer) is used, this product or the power supply may get damaged.
- In case air bubbles are drawn into the sensing part, take care that it may take some time for sensing to stabilize, or sensing may even become unstable.
- When conducting maintenance after operation, wipe all liquid from the sensor and mounting bracket with a soft cloth.
- If there is liquid remained or scratch on the sensing surface or the exclusive mounting bracket, normal operation cannot be performed.
- Since this sensor employs non-modulated infrared LED, take sufficient care against extraneous light.
 Do not expose the sensing part directly to the extraneous light.
- Avoid dust, dirt, and steam. Further, do not use this product in an environment containing organic solvents.
- Take care that the product does not come in contact with oil, grease or organic solvents, such as, thinner, etc.
- In case this sensor is used where electrostatic charge is present, use a metal leak pan, which should be connected to an actual ground.


3 MOUNTING

EX-F71□

 Insert the M4 stud-bolt (length 10mm or more) welded on the user's facilities into the mounting hole of the SUS mounting bracket and screw with an M4 nut (please arrange separately).

The tightening torque should be 0.98N·m or less.

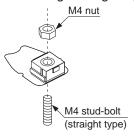

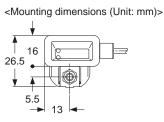



EX-F72

<In case of using the two-point-fixing PVC mounting bracket>

 Insert M4 stud-bolts (length 10mm or more) welded on the user's facilities into the mounting holes of the two-point-fixing mounting bracket and screw with M4 nuts (please arrange separately).

The tightening torque should be 0.49N·m or less.

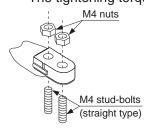

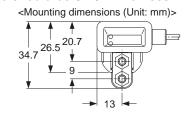


<In case of using the PVC mounting bracket for adhesive fixing>

 Use adhesive to stick fast the mounting bracket on the mounting surface. Please note that if the adhesive sticks out from the bottom surface of the mounting bracket or is 0.5mm, or more thick, the sensor body cannot be fitted to the mounting bracket.


How to fit the sensor body to the exclusive mounting bracket

 Match the notch in the sensor body with the projection of the exclusive mounting bracket and slide till a click is felt.

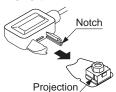


4 I/O CIRCUIT DIAGRAMS

NPN output type

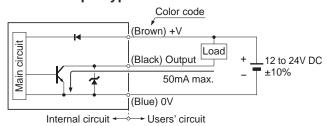

PNP output type

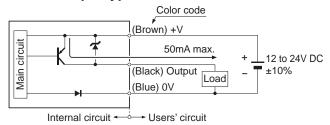

5 INTENDED PRODUCTS FOR CE MARKING

- The models listed under " I SPECIFICA-TIONS" come with CE Marking.
 As for all other models, please contact our office.
- Contact for CE
 Panasonic Marketing Europe GmbH Panasonic Testing Center
 Winsbergring 15, 22525 Hamburg, Germany

Panasonic Industrial Devices SUNX Co., Ltd.

http://panasonic.net/id/pidsx/global

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Phone: +81-568-33-7861 FAX: +81-568-33-8591

About our sale network, please visit our website.

© Panasonic Industrial Devices SUNX Co., Ltd. 2014 PRINTED IN JAPAN